

Provides protection against rising repair costs - whether it's a new or used watercraft.

Ask your dealer for details.



Inboard, Stern Drive & Diesel Engines



CONTROLS

Neutral start switch assembly, starter/choke primer switch, starter/stop button, throttle control handle, throttle cam lever & cable, shift cable & interrupter switch, tilt/trim switch, ignition switch (EXCLUDING KEY & TUMBLER).

COOLING

The following parts of the closed cooling system are covered: expansion/surge tank & valve, heat exchanger, circulating/water pump.

ELECTRICAL

Alternator, starter, solenoid & drive, stator, voltage regulator & rectifier, ignition coils, switch box, ignition module & trigger/amplifier, windshield wiper motor. (EXCLUDING WIRING & WIRING HARNESS).

ENGINE

The following internal parts: pistons & piston rings, crankshaft & main bearings, connecting rods & rod bearings, reeds & reed block, camshaft & bearings, rocker arms, lifters, followers, valves, valve springs, guides & seats. Also covered: manifolds (excludes risers, riser gaskets & pipes), fly-wheel, harmonic balancer, oil pan, engine mounts, distributor housing, shaft & bearings. Cylinder block, sleeves & heads if damaged as a result of the FAILURE of a lubricated internal part. DIESEL ONLY: Turbocharger housing & all internal parts, waste gate actuator.

FUEL SYSTEM

Fuel pump, fuel injectors, electric choke solenoid, air box, flame arrestor, distributors, ECU module, sensors & limiters.

INTERMEDIATE HOUSING

Transom plate, upper gearcase, u-joints, shaft & bearings, upper & lower steering bearings, gimbal & tilt bearings, shift bell crank, bushings & plug, bellows, center & drive yoke. Intermediate/adaptive housing & upper gearcase if damaged as a result of the FAILURE of a lubricated internal part.

LUBRICATING SYSTEM

Oil pump, injection drive gear & shaft, oil tank, oil level sensor & warning horn, oil lines, oil injection metering system.

POWER TRIM

Spring sending unit, oil pump, relief valve, spring & O-ring, trim & tilt cylinders, manual release valve, hydraulic pump, reverse lock valve, power tilt & trim motors, solenoids & switches.

SEALS & GASKETS

Seals and gaskets, if needed, for covered components. (NEW WATERCRAFT ONLY)

STEERING

Power Steering: Steering control helm assembly, control rack and yoke assembly, power steering pump, power steering cylinder, steering wheel (excludes cables).

Hydraulic Steering: Hydraulic steering head, hydraulic steering lines, hydraulic steering cylinder, hydraulic steering flow valves (excludes cables).

STERN DRIVE

Lower Drive Unit: Gearcase head, bearings & oil retainer, gearcase assembly, driveshaft & upper bearings, shift rod & cover assembly, lower pinion bearing, forward gear, pinion gear, reverse gear, propeller shaft, shift fork. Gearcase housing if damaged as a result of the FAILURE of a lubricated internal part.

TRANSMISSION

Internally lubricated parts including: clutch plates and clutch drums, thrust plates, planetary gears, shift bands, reduction gears and reduction bearings, shafts, carrier bearings, hydraulic pumps, hydraulic pistons, valve bodies, transmission mounts, oil pan. Transmission only if damaged by a failure of a covered internally lubricated part.

V-DRIVE

Internally lubricated parts including: bearings, thrust bearings, bevel gears, shafts, shims, bearing carriers. V-Drive case only if damaged by a failure of a covered internally lubricated part.



Administered by

SSI

888/464-3774

ssi@service-contract.com

This brochure is only an outline of the XtremegardSM Service Contract Coverage. For exact coverages, exclusions, and limitations, refer to the XtremegardSM Service Contract booklet.

Marine Coverage

Outboard & Jet Boat



COOLING

Circulating water pump.

CONTROLS

Neutral start switch assembly, starter/choke primer switch, starter/stop button, throttle control handle, throttle cam lever & cable, shift cable & interrupter switch, tilt/trim switch, ignition switch (EXCLUDING KEY & TUMBLER).

ELECTRICAL

Alternator, starter, solenoid & drive, stator, voltage regulator & rectifier, ignition coils, switch box, ignition module & trigger/amplifier, windshield wiper motor. (EXCLUDING WIRING & WIRING HARNESS).

ENGINE

The following internal parts: pistons & piston rings, crankshaft & main bearings, connecting rods & rod bearings, reeds & reed block, camshaft & bearings, rocker arms, lifters, followers, valves, valve springs, guides & seats. Also covered: manifolds (excludes risers, riser gaskets & pipes), fly-wheel, oil pan, engine mounts, distributor housing, shaft & bearings. Cylinder block, sleeves & heads if damaged as a result of the FAILURE of a lubricated internal part. DIESEL ONLY: Turbocharger housing & all internal parts, waste gate actuator.

FUEL SYSTEM

Fuel pump, fuel injectors, electric choke solenoid, air box, flame arrestor, distributors, ECU module, sensors & limiters.

JET DRIVE

Lubricated internal parts of the pump housing, impeller, steering nozzles, power valve controller, intake grate, ride plate, flame arrestors, stator assembly. Impeller housing if damaged by the impeller. Jet drive housing if damaged as a result of the FAILURE of a lubricated internal part.

LUBRICATING SYSTEM

Oil pump, injection drive gear & shaft, oil tank, oil level sensor & warning horn, oil lines, oil injection metering system.

LOWER UNIT

Lower Drive Unit: Gearcase head, bearings & oil retainer, gearcase assembly, driveshaft & upper bearings, shift rod & cover assembly, lower pinion bearing, forward gear, pinion gear, reverse gear, propeller shaft, shift fork. Gearcase housing if damaged as a result of the FAILURE of a lubricated internal part.

POWER TRIM

Spring sending unit, oil pump, relief valve, spring & O-ring, trim & tilt cylinders, manual release valve, hydraulic pump, reverse lock valve, power tilt & trim motors, solenoids & switches.

SEALS & GASKETS (NEW WATERCRAFT ONLY)

Seals and gaskets, if needed, for covered components.

STEERING

Hydraulic Steering: Hydraulic steering head, hydraulic steering lines, hydraulic steering cylinder, hydraulic steering flow valves, steering yoke (excludes cables).

Power / Mechanical Steering: Control helm assembly, control rack and yoke assembly, power steering pump, power steering cylinder, steering wheel, steering wheel mounting hub.

TRANSMISSION

All lubricated internal parts within the transmission case. Also covered: oil pan, transmission mounts. Case if damaged as a result of the FAILURE of a lubricated internal part.

Personal Watercraft



CONTROLS

Neutral start switch assembly, starter/choke primer switch, starter/stop button, throttle control handle, throttle cam lever & cable, shift cable & interrupter switch, tilt/trim switch, ignition switch (EXCLUDING KEY & TUMBLER).

DRIVE LINE SYSTEM

Drive shaft, bushings, bearings, flywheel.

ELECTRICAL

Alternator, starter, solenoid & drive, stator, voltage regulator & rectifier, ignition coils, switch box, ignition module & trigger/amplifier, windshield motor. (EXCLUDING WIRING & WIRING HARNESS).

ENGINE

All internally lubricated parts including: pistons, rings pins, crankshaft and main bearings, connecting rods and rod bearings, reed valves and reed blocks, cylinder heads, crankcase.

FUEL SYSTEM

Fuel pump, fuel injectors, electric choke solenoid, air box, flame arrestor, distributors, ECU module, sensors & limiters.

JET BOAT / PERSONAL WATERCRAFT

Lubricated internal parts of the pump housing, handlebar, impeller, steering nozzles, power valve controller, intake grate, ride plate, flame arrestors, stator assembly. Impeller housing if damaged by the impeller. Jet drive housing if damaged as a result of the FAILURE of a lubricated internal part. NEW Personal Watercraft ONLY. Factory Trailer sold with the unit.

LUBRICATING SYSTEM

Oil pump, injection drive gear & shaft, oil tank, oil level sensor & warning horn, oil lines, oil injection metering system.

PICK-UP & DELIVERY - PERSONAL WATERCRAFT ONLY

Pick-up and delivery charges up to \$100 will be reimbursed when the failure of a covered component disables your personal watercraft.

SEALS & GASKETS (New Personal Watercraft Only)

Seals and gaskets, if needed, for covered components.

STEERING

Steering control assembly, steering gate, rudder, nozzle (excluding cables).

Benefits & Options



XtremegardSM Marine offers many additional benefits and options which start immediately upon purchasing your Service Contract.

HOIST/HAUL-OUT ALLOWANCE

The Service Contract will pay up to \$125 of Hoist/Haul-Out coverage if required due to mechanical failure of a covered component.

TOWING ALLOWANCE

The Contract will pay up to \$125.00 for Towing anytime a covered component fails causing the craft to be towed either in the water or on land.

OPTIONS

In addition to XtremegardSM Marine standard coverage choose from our Optional Paks:

Trailer Pak	Cruiser Pak	Navigation Pak*
Sport Fishing Pak	Crusier Fishing Pak*	

*New Craft Only