

Gas and Diesel Inboard and Stern Drive

ENGINE

Pistons, piston rings and pins, main bearings and rod bearings, crankshaft, connecting rods, camshaft, camshaft bearings, timing chain, timing gear cover, gears and/or belt, rocker arm(s), valve springs, valve guides, valve push rods, valve spring retainers, lifters, oil pump, oil filter housing. Valve cover(s), harmonic balancer, engine mounts, and flywheel. Distributor, engine water coolant circulating pump, coolant heat exchanger. Engine head(s), engine block and/or cylinder barrels, intake manifolds only if damaged as a result of a covered failure of an above listed component.

TRANSMISSION

Clutch plates, thrust plates, planetary gears, shift bands, clutch drums, reduction gears, bearings, shafts, bearing carriers, hydraulic pumps, valve bodies, hydraulic pistons, neutral safety switch, control valves, transmission oil cooler, shift pressure transducer and transmission mounts. Transmission case if damaged as a result of a covered failure of an above listed component.

FUEL SYSTEM

Fuel injectors, fuel rails, ECU module, pressure regulator, fuel injection pump, fuel management control unit, wiring harness repairs.

UPPER HOUSING

Upper drive gears set, clutch dogs/cones, shift cams, bearings, shims, bearing carriers, upper drive shaft, spring kit. Upper case housing if damaged as a result of a covered failure of an above listed component.

LOWER UNIT

Forward gear, reverse gear, pinion gear, clutch dog, dog pin, cam follower, prop shaft, drive shaft, shift shaft, bearing carriers, bearings, shims. Gear housing if damaged as a result of a covered failure of an above listed component.

V-DRIVE

Bevel gears, bearings, shafts, shims, bearing carriers, friction and steel clutch plates, pressure plates, clutch drum, springs, control valve, regulator valve, hydraulic pump, neutral safety switch, ring gear, V-Drive oil cooler, shift pressure transducer. V-drive case if damaged as a result of a covered failure of an above listed component.

MANUAL / HYDRAULIC STEERING

Control helm assembly, control rack and yoke assembly, power steering pump, hydraulic steering cylinder, power steering pump pulley, hydraulic steering pump, power steering oil cooler.

CONTROLS

Manual and electronic shift and/or throttle control box components to include: cams, eccentrics, shafts, pivots, bushings, housing, control arms/levers and knobs, starter/stop button, tether switch, neutral safety switch, joystick, thrust vector module and cylinder. Shift control cable, throttle control cables, shift and throttle micro switches, potentiometer, control panel and wire harness.

ELECTRICAL SYSTEM

Alternator, voltage regulator/rectifier, engine mounted wiring harness, ignition switch, starter motor, starter armature, starter field windings, starter drive, starter solenoid.

INTERMEDIATE HOUSING

Intermediate shaft, U-joints, center yoke, drive yoke, gimbal bearings, steering yoke, engine coupler, intermediate shift cable.

Administered by

ServiceGuard Systems, Inc.

Toll Free 888-464-3774

ssi@service-contract.com

Except in Florida where the Administrator is Dealers Assurance Company, 15920 Addison Road, Addison, TX 75001, FL License #02977, Toll Free 844-865-6781. Replacement parts may be new, used or remanufactured.

This brochure should not be relied upon when purchasing coverage. Please refer to the ESC contract book for specific coverage details. Changes may have been made to the ESC program since the printing of this brochure. All transactions related to the ESC program are governed solely by the provision of the contract book.



Service Contract

Benefits

HOIST/LIFT-OUT

Hoist/Lift-Out provided to facilitate covered repairs.

TOWING

Towing reimbursement anytime a covered component fails causing the craft to be towed either in the water or on land.



Outboard

PWC / Sport Boat

Accessory Packages



ENGINE

Pistons, piston rings and pins, main bearings and rod bearings, crankshaft, connecting rods, camshaft, camshaft bearings, valve springs, guides, lifters, rocker arms, valve spring retainer, valve cover, oil pump, oil filter housing, reeds and reed blocks and flywheel. Engine head(s), engine block and/or cylinder barrels if damaged as a result of a covered failure of an above listed component.

FUEL SYSTEM

Electric choke solenoid (enrichener). Electronic fuel injector delivery pumps (high and low pressure), fuel injectors, fuel rails, ECU module, pressure regulator, mechanical fuel pump.

LUBRICATING SYSTEM

Oil injection pump, oil pump drive gear, oil pump drive shaft, oil tank, oil tank cap, oil level warning horn and lights, oil injection check valves.

LOWER UNIT

Forward gear, reverse gear, pinion gear, clutch dog, dog pin, cam follower, prop shaft, drive shaft, bearing carriers, bearings, shims, shift shaft. Gear housing if damaged as a result of a covered failure of an above listed component.

JET DRIVE

Drive shafts, shaft bearings, reverse gate, shifts cams. Housing only if damaged as a result of a covered failure of an above listed component. Note: Does not include jet impellers.

ELECTRICAL SYSTEM

Alternator, voltage regulator/rectifier, engine mounted wiring harness, OEM ignition switch, starter motor, starter armature, starter field windings, starter magnets, brush holders and brushes, end caps and bushings, starter drive, starter solenoid, power pack/switch box, electronic ignition module, timer base, trigger assembly, ignition coil, capacitor discharge module.

POWER TRIM/TILT

Trim and/or tilt motor, trim cylinders, cylinder rams, cylinder mounts and pivots, trim motor actuator solenoids, pump, trim and/or tilt wiring harness, trim and/or tilt master control switches, trim limit switch, trim position sender.

STEERING

Control helm assembly, control rack and yoke assembly, power steering pump, power steering cylinder, steering wheel.

CONTROLS

Manual and electronic shift and/or throttle control box components to include: cams, eccentrics, shafts, pivots, bushings, housing, control arms/levers and knobs, starter/stop button, tether switch, neutral safety switch, joystick, thrust vector module and cylinder. Shift control cable, throttle control cables, shift and throttle micro switches, potentiometer, control panel and wire harness.

DIRECT FUEL INJECTION

Air injectors, fuel injector, air compressor, tracker valve, fuel regulator, fuel rails, check valve, mechanical fuel pump, low and high pressure fuel pump, vapor separator.

ENGINE

Pistons, piston rings and pins, main bearings and rod bearings, crankshaft, connecting rods, camshaft, camshaft bearings, valves, valve springs, guides and seats, intake manifold, reeds and reed blocks. Exhaust metering valve, springs and diaphragm. Timing chain, gears and/or belt, flywheel. Engine head(s), engine block and/or cylinder barrels, only if damaged as a result of a covered failure of an above listed component.

CONTROLS

Shift and throttle control box components to include: cams, eccentrics, shafts, pivots, bushings, housing, control arms/levers and knobs, shift control cable, throttle control cable, ignition switch.

ELECTRICAL SYSTEM

LCD Gauge Assembly, alternator/stator, voltage regulator/rectifier, engine mounted terminal blocks, engine mounted wiring harness, electric choke solenoid, ignition switch, starter motor, starter armature, starter field windings, starter magnets, brush holders and brushes, end caps and bushings, starter drive, starter solenoid.

FUEL SYSTEM

Fuel delivery pump (mechanical/diaphragm), air box (silencer), supercharger, electric choke solenoid (enrichener). Electronic fuel injector delivery pumps (high and low pressure), fuel injectors, fuel rails, fuel distributors, ECU module, throttle position sensor, manifold air temperature sender, idle speed control, mass air flow sensor, detonation/knock sensor, ignition pickup sensor.

IGNITION

Power pack/switch box, amplifier, ignition trigger coil, ignition high output coil, spark plug wires, rev limiter.

JET DRIVE

Drive shaft, shaft bearings, shaft coupler, flex disc. VTS motor, VTS box, VTS shafts, VTS gauge and switch. Housing only if damaged as a result of a covered failure of an above listed component.

LUBRICATING SYSTEM

Oil injection pump, oil pump drive gear, oil pump drive shaft, oil tank, oil tank cap, oil level sensors, oil level warning horn and lights, oil injection lines, oil injection check valves, oil injection metering system.

STEERING

Control helm assembly, control rack and yoke assembly, column u-joint, steering gate, rudder, nozzle and pulleys.

TRAILER

Frame rails, wheel bearings, spindles and springs, winch stand, welds, axle, hubs, coupler. Bunk and/or roller cradles.

RUNABOUT PACKAGE

Digital depth finder, electrical, stereo, gauges, GPS, VHF radio, waste system, water system, sunshade, trim tabs, bilge blower and trailer.

WAKE PACKAGE

Ski and wakeboard tower, wake shaping, cruise control, ballast, electrical, stereo, digital depth finder, gauges, GPS, VHF radio, water system, sunshade, trim tabs, lighting, cockpit heat exchanger, bilge blower and trailer.

PONTOON PACKAGE

Digital depth finder, fish finder, electrical, stereo, refrigerator, gauges, GPS, VHF radio, water system, sunshade, lighting, bilge blower and trailer.

DAYBOAT PACKAGE

Digital depth finder, electrical, stereo, air conditioner, refrigerator, ice maker, gauges, GPS, VHF radio, horn, spotlight, trim tabs, waste system, water system, sunshade, lighting, bilge blower, windlass and trailer.

NAVIGATION PACKAGE

Auto pilot, day/night camera, electronic compass, GPS, radar and satellite weather module.

SPORT FISHING PACKAGE

Electric trolling motor, power transom, electrical, stereo, fish finder/GPS, down riggers, digital depth finder, air conditioner, gauges, VHF radio, trim tabs, water system, sunshade, bilge blower, live well/bait well, power poles and trailer.

OFFSHORE SPORT FISHING PACKAGE

Includes everything in the Sport Fishing Package plus waste system, lighting, spotlight, shore power, refrigerator, freezer, galley cook top, microwave oven, ice maker, controls, horn, steering, windlass and joystick.

TROPHY FISHING PACKAGE

Includes everything in the Offshore Sport Fishing Package plus television, shore power, cockpit grill, fish box ice maker, cockpit bait freezer, cable master and oil exchange pump.

CAPTAIN'S PACKAGE

Air conditioner, Digital depth finder, stereo, waste system, water system, lighting, shore power, refrigerator, freezer, galley cook top, ice maker, horn, electrical, 12 volt/24 volt, spotlight, gauges, VHF radio, trim tabs, sunshade, bilge blower and windlass.

CRUISER PACKAGE

Includes everything in the Captain's Package plus grill, microwave oven, clothes washer/dryer, central vacuum, trash compactor, swim platform and windshield defogger/cockpit heater.

ELITE YACHT PACKAGE

Includes everything in the Cruiser Package plus television, cable master, oil exchange pump and passerelle/tender crain.